

Built-in power(A) / Built-in amplifier(N,P) photo sensor

HANYOUNG NUX

PEA series

INSTRUCTION MANUAL

HANYOUNGNUXCO., LTD

28, Gilpa-ro 71beon-gil,
Michuhol-gu, Incheon, Korea
TEL : +82-32-876-4697
http://www.hanyoungnux.com

Thank you for purchasing Hanyoung Nux products.
Please read the instruction manual
carefully before using this product, and use the product correctly.
Also, please keep this instruction manual where you can see it any time.

MK1501KE240105

Safety information

Please read the safety information carefully before use, and use the product correctly.
The alerts declared in the manual are classified into **Danger**, **Warning** and **Caution** according to their importance

| | |
|----------------|------------------------------------------------------------------------------------------------------------------|
| DANGER | Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury |
| WARNING | Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury |
| CAUTION | Indicates a potentially hazardous situation which, if not avoided, may result in minor injury or property damage |

DANGER

The input/output terminals are subject to electric shock risk.

Never let the input/output terminals come in contact with your body or conductive substances.

CAUTION

- Applicable Pollution degree 3 of intended environment.
- Never use it on AC power.
- Be careful of wiring. It may cause explosion, fire, or machine breakdown.
- Do not use the product in a state where the product body or cable is crushed.
- Do not disassemble, repair or modify the product.
- When the lens of the photo sensor is contaminated by foreign substances, use a dry piece of cloth and wipe off the substance lightly. Never use thinner or organic solvents.
- Separate high voltage cable and power line from the sensor wire. Be cautious since using the same pipe during wiring could cause malfunction.
- If the cable needs to be extended, use over 0.3 mm and be cautious because of a possible sudden voltage drop.
- When using the sensor under lights with high frequency, such as fluorescent lamps or mercury lamps, block it with a light shading plate and avoid the lens from facing the light directly.
- If multiple through-beam type photoelectric sensors are installed

WARNING

- This product is not for outdoor use (it may shorten the product lifetime and cause electric shock)
- Do not use this product in places with flammable or explosive gases (it does not have an explosion-proof structure, so there are fire or explosion risks)
- Do not use the product in places where vibrations or shocks exceed the reference values (it has a double insulation structure, but the components may be damaged)

close together, malfunction may happen due to the mutual interference.

- Using inductive load (relay, coil) for the output can cause an instantaneous increase in load by more than two times and damage the TR of the output. Therefore, please set half of the maximum load.
- There is an over-current protecting circuit within the output side that breaks the output when the current is higher than the rated load current. Therefore, please set within 70% of the maximum load.
- Do not use the product in places with heavy dust or debris that can contaminate the lenses and consequently cause malfunctions.
- The contents of this manual may be changed without prior notification
- Any use of the product other than those specified by the manufacturer may result in personal injury or property damage.
- When using the Switching Power Supply as power source, ground the Frame Ground (F.G.) terminal and be sure to connect the noise-cancelling condenser between OV and F.G. terminals
- The power supply should be insulated and limited voltage/current or Class 2, SELV power.

Specification

| Sensing mode | | Through-beam | Retroreflective (M.S.R.) | Diffuse-reflective |
|-----------------------------------------|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| Model | Relay output (AC/DC power) | PEA-T30A | PEA-MSA | PEA-R2A |
| | NPN Open collector output (DC power) | PEA-T30N | PEA-MSN | PEA-R2N |
| | PNP Open collector output (DC power) | PEA-T30P | PEA-MSP | PEA-R2P |
| Sensing distance | | 30 m | 0.1 ~ 5 m | 2 m |
| Hysteresis distance | | - | | 20% or less of detection distance |
| Detecting object | | Ø12 mm more (Opaque) | Ø60 mm more (Opaque) | White paper (100 x 100 mm) |
| Light source (wavelength) | | Infrared light emitting diode (855 nm) | Red light emitting diode (660 nm) | Infrared light emitting diode (855 nm) |
| Power voltage | Relay output (AC/DC power) | 24 ~ 240 V a.c. ±10% or 24 ~ 240 V d.c. ±10% (Ripple max. 10%) | | |
| | Open collector output (DC power) | 12 ~ 24 V d.c. Class 2 ± 10% (Ripple max. 10%) | | |
| Power consumption | Relay output (AC/DC power) | • Transmitter Max. 1 VA, • Receiver Max. 2VA | Max. 3 VA | |
| | Open collector output (DC power) | • Transmitter Max. 15 mA • Receiver Max. 20 mA | Max. 35 mA | |
| Control output | Relay output (AC/DC power) | • Relay contact output (Contact configuration 1a1b) • Contact Capacity: 30 V d.c. 5A / 250 V a.c. 5 A with resistive load | | • Electrical life: Min. 100,000 cycles • Mechanical life: Min. 50 million cycles (Opening/closing frequency 180 times/min) |
| | Open collector output (DC power) | • NPN or PNP open collector output • Load current - Max. 100 mA (26.4 V d.c. standard) | | • Residual voltage - Max. 1.5 V |
| Operation mode | | Light ON / Dark ON button switch type | | |
| Indicator light | | Control output indicator light : Orange LED, Stability indicator light : Green LED (However, the Green LED of the through-type emitter is a power indicator) | | |
| Auto-teaching | | See How to set sensitivity and operation mode → Section 3. | | |
| AGC | | After 20 seconds of unstable light entering on button locked state to stable light entering state | | |
| Sensitivity adjustment | | B1 increases the sensitivity and B2 decreases the sensitivity | | |
| Protection circuit | Common | Mutual interference prevention function | | |
| | Open collector output (DC power) | Power reverse connection protection, Output short-circuit over-current protection, Output reverse connection protection, Output short-circuit alarm | | |
| Response time | Relay output (AC/DC power) | Max. 20 ms | | |
| | Open collector output (DC power) | Max. 1 ms | | |
| Insulation Resistance | | More than 20 MΩ (500 V d.c. mega) | | |
| Dielectric strength | | 1,000 V a.c. (50/60 Hz for 1 minute) | | |
| Vibration resistance | | 10-55Hz, sweep: 1.5mm, X-Y-Z in each direction for 2 hours | | |
| Shock resistance | | 500 m/s ² , X-Y-Z each direction 3 times | | |
| Ambient illumination | | Sunlight : max. 11,000 lx / Incandescent: max 3,000 lx | | |
| Ambient temperature range | | Operating temperature : -20 ~ +55 °C, During storage : -40 ~ +70°C (Without condensation or icing) | | |
| Ambient humidity | | 35 ~ 85 % RH (Without condensation or icing) | | |
| Protection | | IP67 (IEC standard) | | |
| Weight (Packing) | Relay output (AC/DC power) | 265g (440g) | 150g (280g) | 145g (260g) |
| | Open collector output (DC power) | 255g (430g) | 140g (270g) | 140g (255g) |
| Texture | Case | PC | | |
| | Display | PC | | |
| | Lens | PMMA | | |
| Accessory | Common | Instructions manual, bracket, bolt (M3 X 12 mm) | | |
| | Accessory | Mirror (HY-M5) | | |
| Connection method | | Cable type | | |
| Wiring specification | Relay output (AC/DC power) | Ø 6 mm, Through-beam type transmitter: 2-core, Through-beam type receiver, Mirror-reflection type, Diffuse-reflective type: 5-core, 2 m | | |
| | Open collector output (DC power) | Ø 6 mm, Through-beam type transmitter: 2-core, Through-beam type receiver, Mirror-reflection type, Diffuse-reflective type: 5-core, 2 m | | |
| Specifications of the small-sized cable | | AWG20 (0.18 mm, 21 wire), Insulation outer diameter: 1.5 mm | | |


- Mutual interference prevention function
- Resistant to noise by adopting digital signal processing
- M.S.R. that receives only the light reflected from the mirror
- IP67 (IEC standard) protection structure with excellent water resistance
- Realization of long-distance detection by adopting high-performance lens

Suffix code

| Model | Code | Content |
|------------------|-------|---------------------------|
| PEA- | □ □ □ | PEA series |
| Sensing mode | T | Through-beam |
| | M | Retroreflective |
| | R | Diffuse-reflective |
| Sensing distance | 30 | 30 m (Through-beam) |
| | 5 | 5 m (Retroreflective) |
| | 2 | 2 m (Diffuse-reflective) |
| Control output | A | Relay contact output |
| | N | NPN Open collector output |
| | P | PNP Open collector output |
| | | AC/DC power |
| | | DC power |

How to set sensitivity and operation mode

| NO | Function | Information |
|----|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ① | Button lock & unlock | Press the B1 () button for more than 3 seconds to change (lock or unlock). |
| ③ | Through-beam | If the B2 () button is pressed for more than 3 seconds in the presence of a detection object, the sensitivity is automatically set. 1) In the presence of a detection object (stable light incident) 2) Release the B2 () button after pressing it for more than 3 seconds. 3) Check the Green + Orange LED cross blinking (try again if either side is not blinking) 4) Press the B2 () button once after removing the detected object (0.5 seconds) |
| | Retroreflective (M.S.R.) | |
| | Diffuse-reflective | |
| ④ | Increase sensitivity | Press the B1 () button for less than 3 seconds to increase the fine sensitivity (1 STEP) |
| ⑤ | Decrease sensitivity | If the B2 () button is pressed for less than 3 seconds, the fine sensitivity decreases (1 STEP) |
| ⑥ | Operation mode change | Press the B1 () + B2 () buttons simultaneously for 5 seconds or longer to change the operation mode (Light ON → Dark ON) After pressing the B1 () + B2 () buttons together for more than 5 seconds, release only B1 () After 5 seconds, release the B2 () button to reset. (Dark ON, sensitivity maximum, button unlock changes, and diffuse reflection type becomes Light ON.) |
| ⑦ | Factory reset | Unstable light if it lasts more than 20 seconds, it is adjusted to stable light incident state. |
| ⑧ | AGC | |

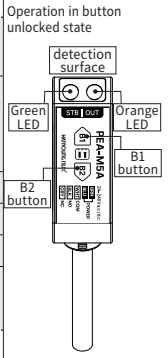


Indicator light state


| | | |
|-----|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ① | Button lock | Within 3 seconds (Green blinking) → After 3 seconds (Orange ON), release the B1 button, Green + Orange blinking (2 seconds) ※ Setting value cannot be changed when button locking or unlocking is operated |
| ② | Button unlock | Within 3 seconds (Green + Orange blinks) → After 3 seconds (Orange ON), release the B1 button, Green + Orange blinks (2 seconds) |
| ③ | Through-beam | Within 3 seconds (Green blinking) → After 3 seconds (Orange ON) → When the B2 button is released, Green + Orange blinks alternately (5 seconds) → Green blinks (2 seconds) If you press the B2 button once when there is Green + Orange blinking (0.5 seconds), Green blinks 6 times. ※ If auto-teaching is attempted while the light from the emitter does not enter the receiver, the Orange blinks (Error displayed for 2 seconds) |
| | Retroreflective (M.S.R.) | |
| ④ | Increase sensitivity | Within 3 seconds (Green blinking) |
| | Decrease sensitivity | Within 3 seconds (Green blinking) |
| ⑥ | Operation mode change | Within 5 sec (Green + Orange OFF) → After 5 sec (Green + Orange ON) → Release B1 + B2 button to blinking Green (2 sec) |
| ⑦ | Factory reset | Within 5 sec (Green + Orange OFF) → After 5 sec (Green + Orange ON) → Release B1 button to blinking Green + Orange ON (5 sec) → After 5 seconds (Green ON) → B2 button is released, Green blinks (2 seconds) |
| Etc | Save previous execution value | ① ~ ⑦ Saved after a certain period of time after performing the operation (no arbitrary operation), blinking Green (1 time) After saving the operation value, even if the power is turned off and on, the previous operation value is saved (automatically saved even in case of power failure) |

Connection diagram


Relay contact output

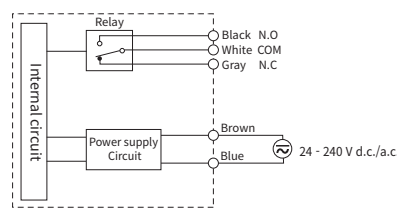


Dimension

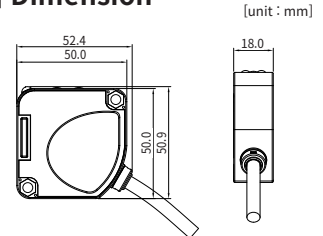


How to install

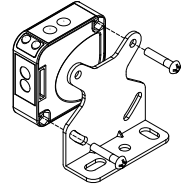

NPN TYPE

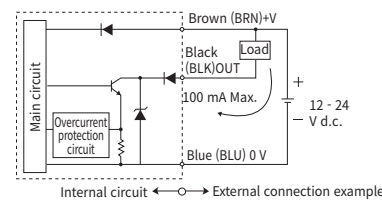


PNP TYPE

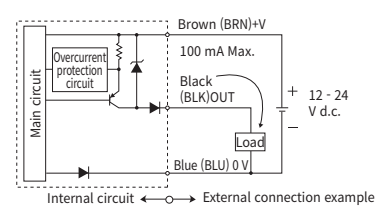


Accessories

Bracket

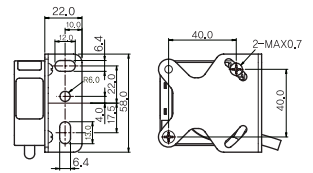

Reflector (HY-M5)

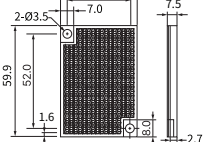

Output operation characteristic

